
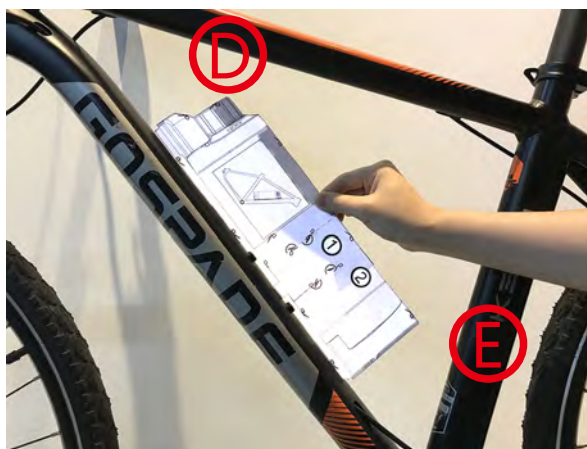
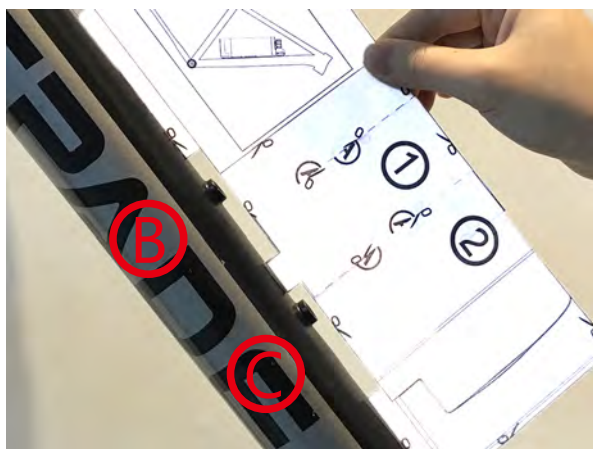
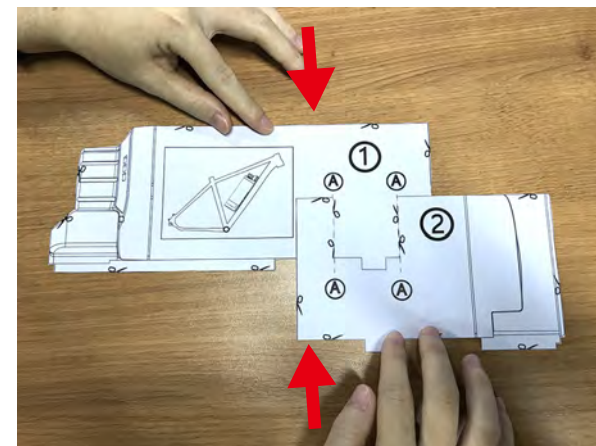
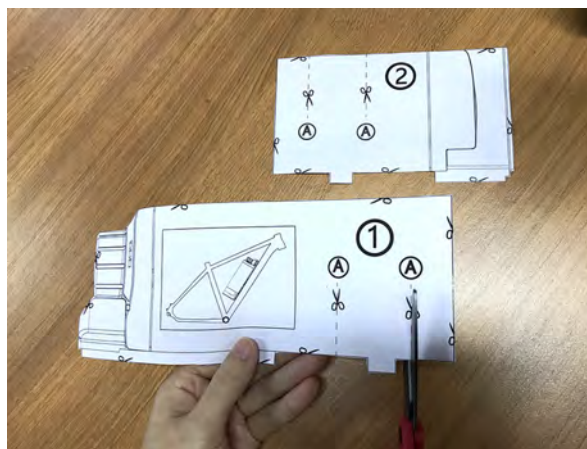


# Universal Ebike Conversion Kits


**GOSPADE**

## Measure Whether The battery Can Be Installed On Your Frame


1. The cardboard model is made up of ① and ② two parts, the cardboard model is 1:1 to the battery size.
2. Download and cut out the cardboard ① and ②.
3. Cut along the dotted line at A on the cardboard ① and ② separately.
4. Combine cardboard ① and cardboard ② along the cutted dotted line.

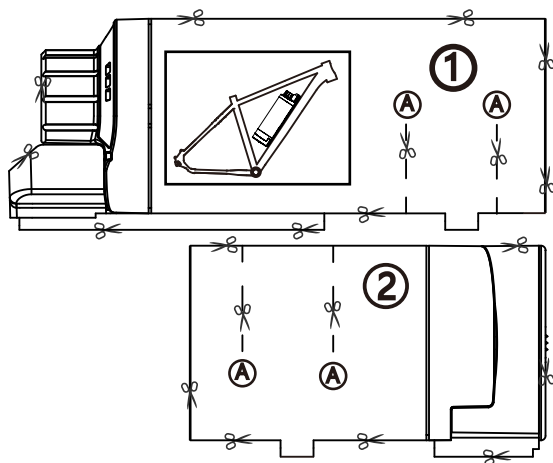


5. Take the cardboard model to your frame and measure it. If the bottle screw hole in the frame is inside the B and C groove separately, and the cardboard model doesn't touch the D and E positions of the frame, then this battery can be installed on your bike frame.

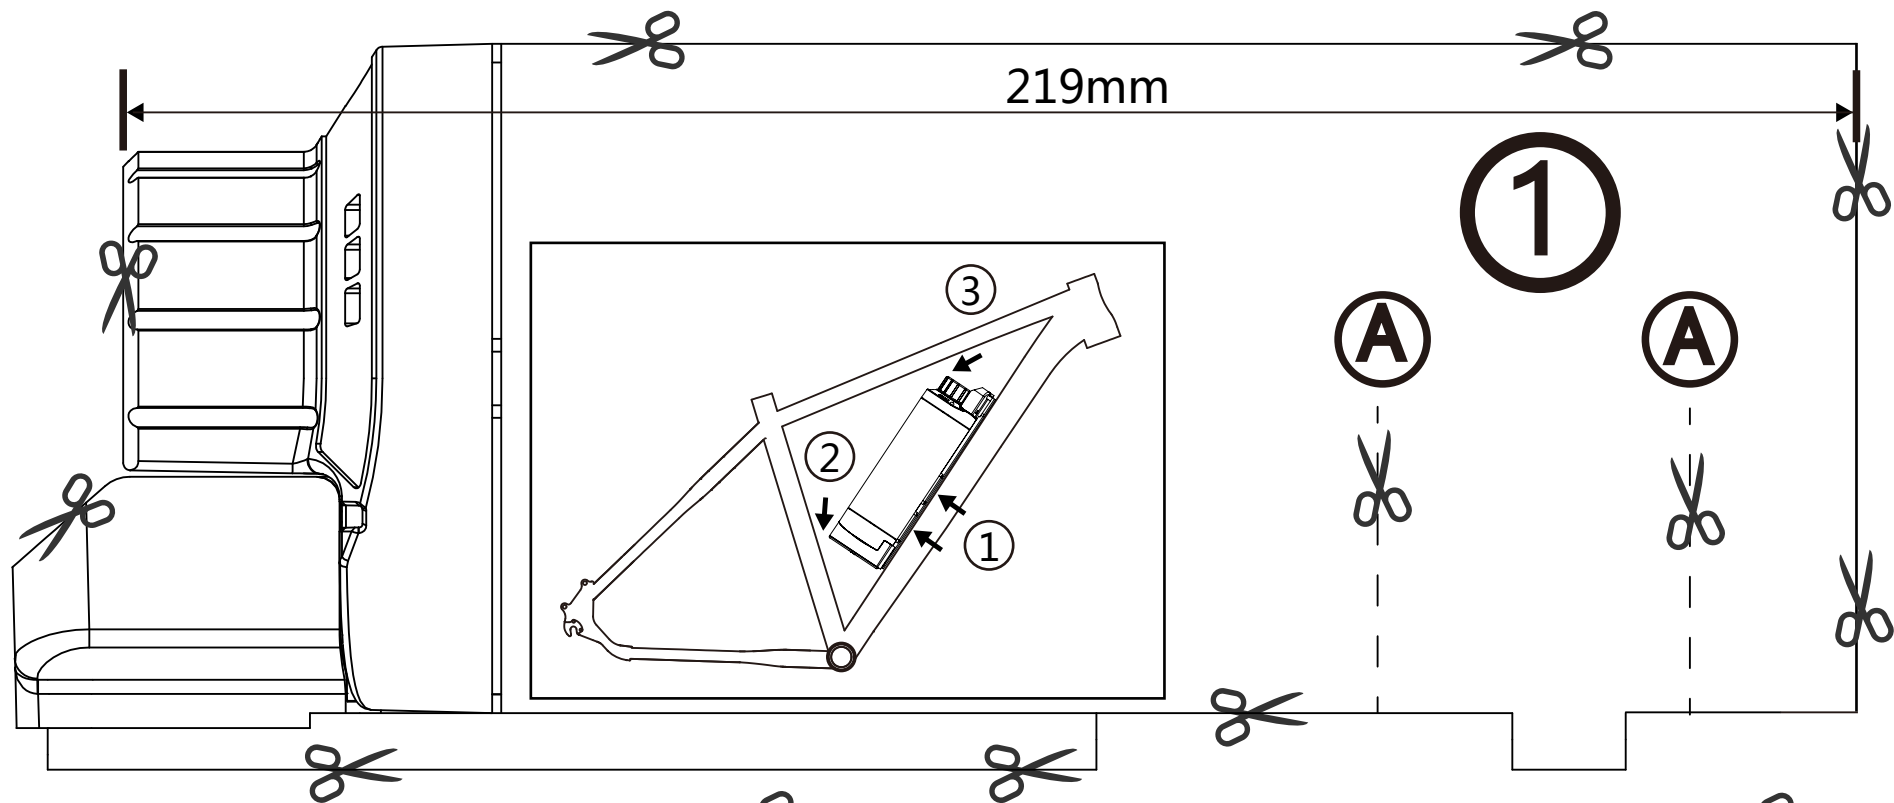

Battery  
10.05Ah

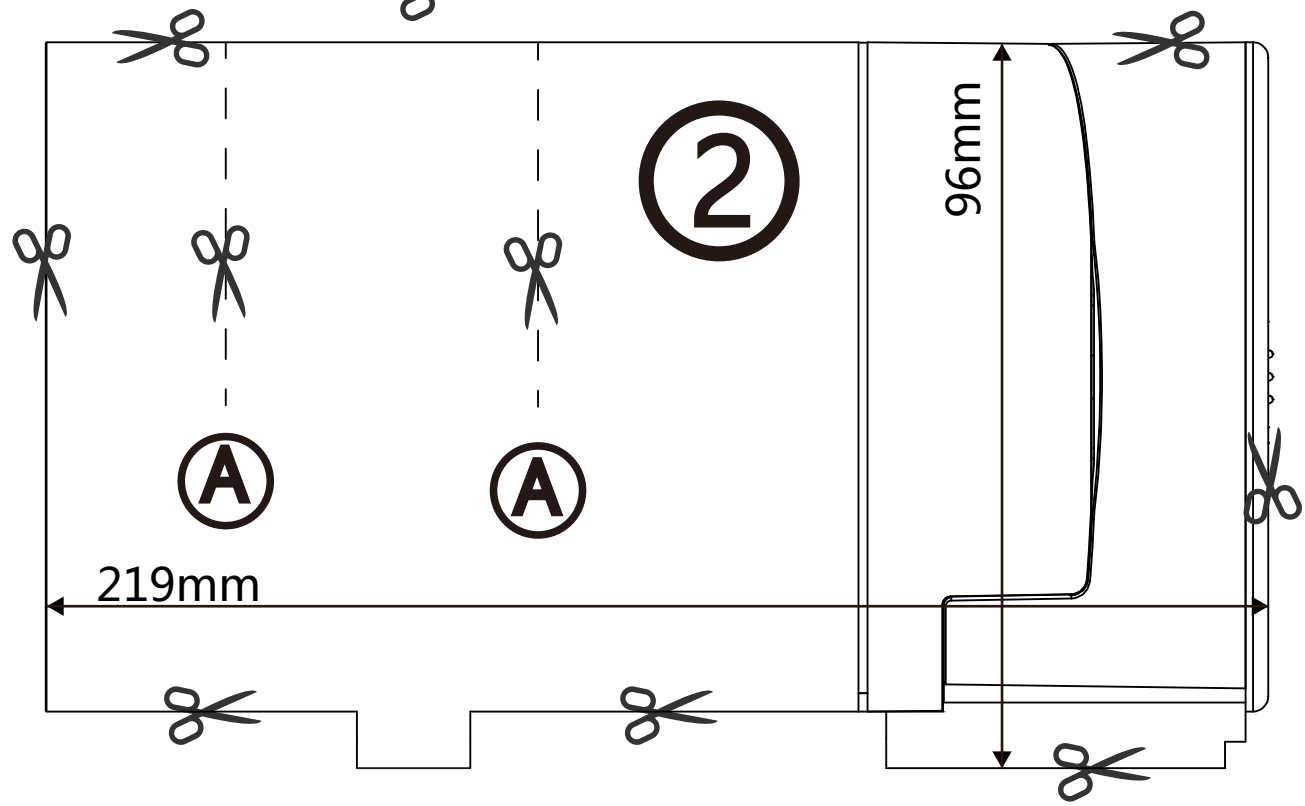

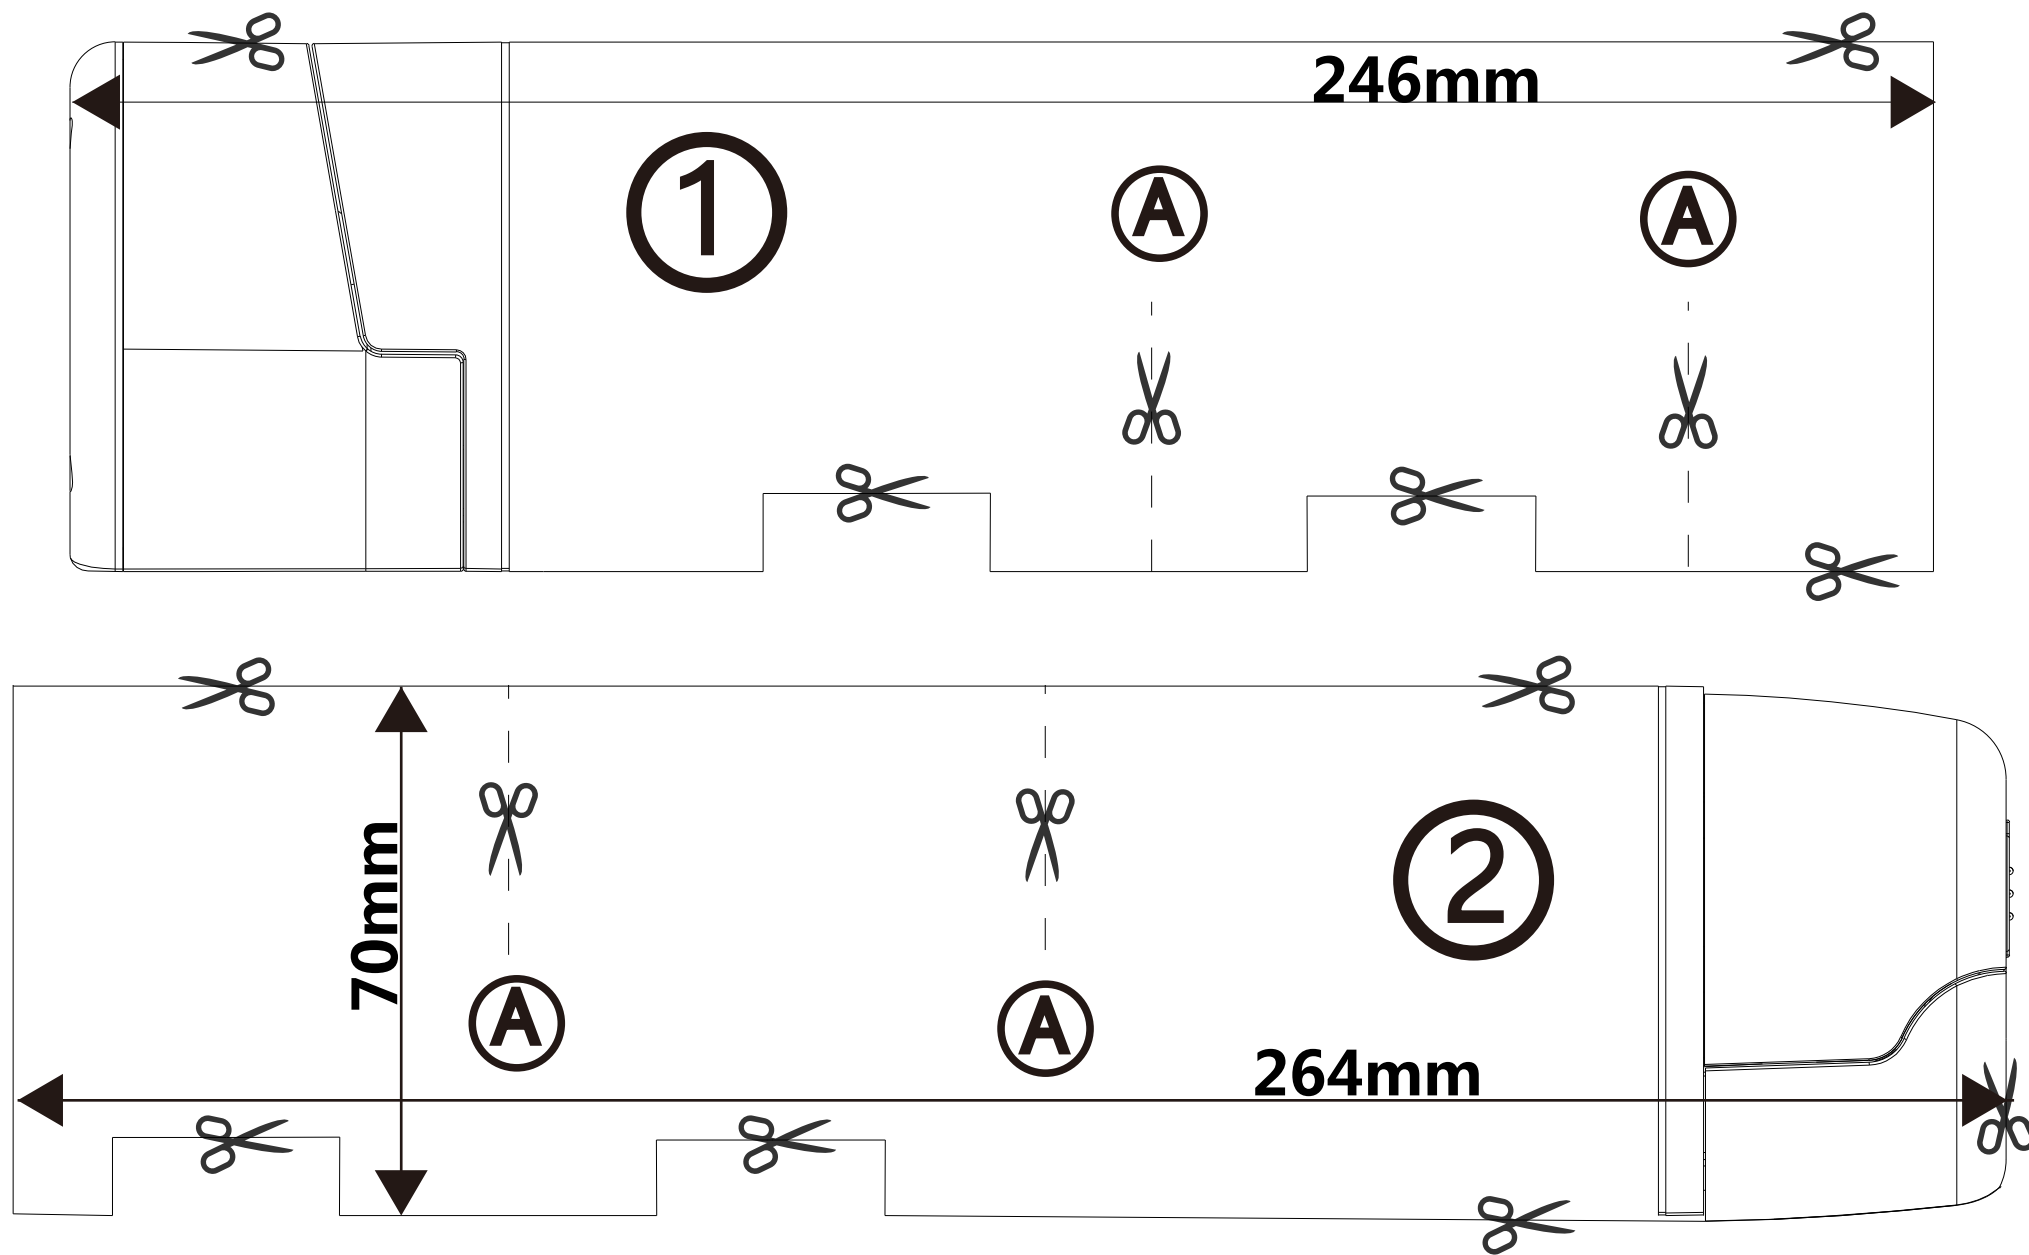

Battery 5.8Ah

# Universal Ebike Conversion Kits

Measure Whether The Motor Can Be Installed On Your Frame :

1. The GOSPADE Motor suitable for the 68/73mm wide bottom bracket frame.
2. Download and cut out the cardboard F.
3. Bend the cardboard F 90 degrees along the dotted line as Figure ②.
4. Align the cardboard F to the bottom bracket hole as Figure ③. If the shaded part of the board doesn't touch the chain stay, then the motor can be installed on your bike frame.

